


# HOW TO CHOOSE YOUR DESK ATTACHMENT




## MXV Desk Monitor Arm

### Standard 2-Piece Desk Clamp

**This is the most common option**

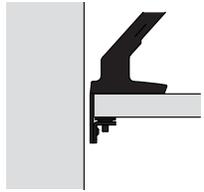


- This is the most common option.
- It can slide on from back or side of desk.
- It can also disassemble to attach when no space behind desk is available.
- Requires space under desk.
- Works with wide variety of desk sizes and shapes.
- Also available as accessory.

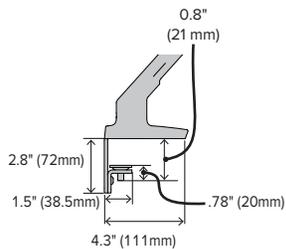

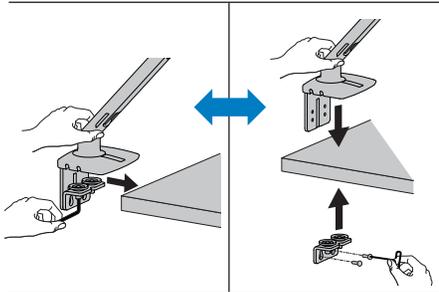


### C-Clamp (under mount)

**Less common option**

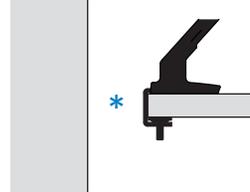


- Used in Pro-office furniture systems.
- Use when the space for clamp under desk is very limited.
- \* Requires 1.2" (31 mm) from edge of desk to slide on from the back or can slide on from the side if possible.
- Also available as accessory.
- Has 0.8" (2cm) setback from edge of desk to allow room for divider panels.

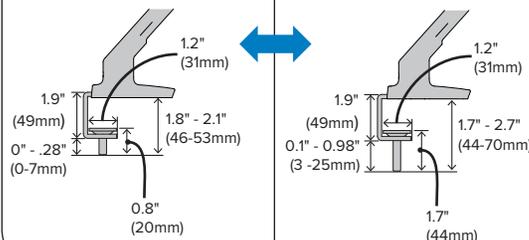

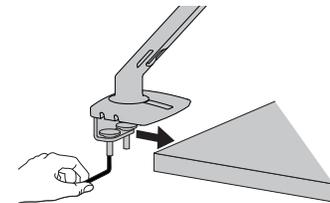


### C-Clamp (top mount)

**Less common option**

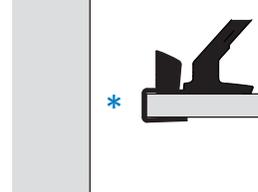


- Used in Pro-office furniture systems.
- Use when there is a need to attach clamp from above the desk.
- Use when the space for clamp under desk is very limited.
- \* Requires open space from edge of desk to slide on from the back or can slide on from the side if possible.
- Also available as accessory.
- Has 0.8" (2cm) setback from edge of desk to allow room for divider panels.

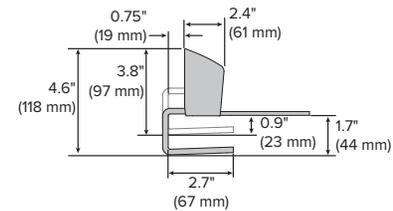

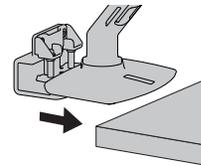


### Grommet Mount

**Available only as accessory**

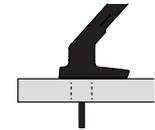


- Use when mounting to edge of desk is not available or not preferred.
- Use when base does not reach edge of desk when monitors are in desired location.
- Available only as accessory.

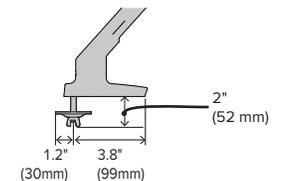
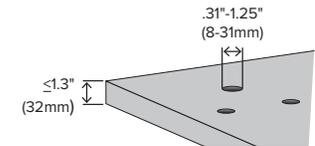
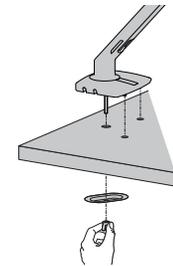


### Standard 2-teilige Schreibtischklemme

Dies ist die am häufigsten gewählte Variante

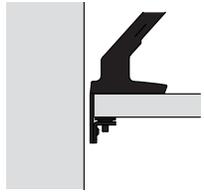


- Dies ist die am häufigsten gewählte Variante.
- Sie kann von hinten oder von der Seite auf den Tisch geschoben werden.
- Wenn hinter dem Tisch kein Platz ist, kann sie auch auseinandergenommen und dann montiert werden.
- Benötigt Platz unter dem Tisch.
- Für verschiedenste Tischgrößen und -formen geeignet.
- Auch als Zubehör erhältlich.

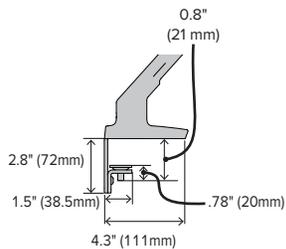

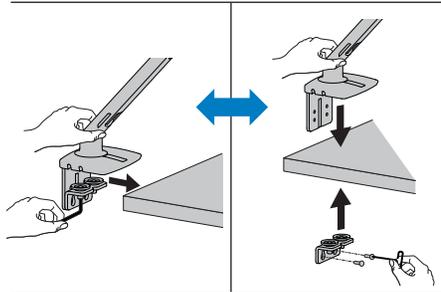


### C-Klemme (Montage von unten)

Seltener gewählte Variante

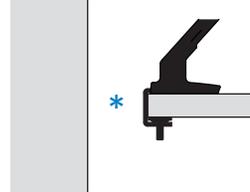

- Zur Verwendung in Pro-office-Möbelsystemen geeignet.
- Geeignet, wenn unter dem Tisch nur sehr begrenzter Platz für eine Klemme vorhanden ist.
- \* Erfordert 1,2" (31 mm) Platz von der Schreibtischkante aus, um von hinten aufgeschoben zu werden, alternativ ist das Aufschieben von der Seite her möglich.
- Auch als Zubehör erhältlich.
- Hat 0,8" (2cm) Abstand von der Schreibtischkante, um Platz für Trennwände zu bieten.

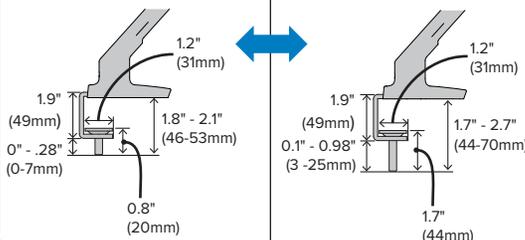

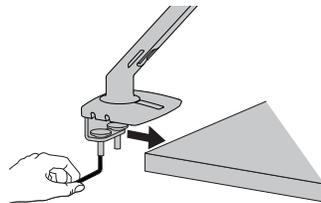


### C-Klemme (Montage von oben)

Seltener gewählte Variante




- Zur Verwendung in Pro-office-Möbelsystemen geeignet.
- Geeignet, wenn eine Klemme von oben am Tisch angebracht werden muss.
- Geeignet, wenn unter dem Tisch nur sehr begrenzter Platz für eine Klemme vorhanden ist.
- \* Erfordert etwas Platz von der Schreibtischkante aus, um von hinten aufgeschoben zu werden, alternativ ist das Aufschieben von der Seite her möglich.
- Auch als Zubehör erhältlich.
- Hat 0,8" (2cm) Abstand von der Schreibtischkante, um Platz für Trennwände zu bieten.

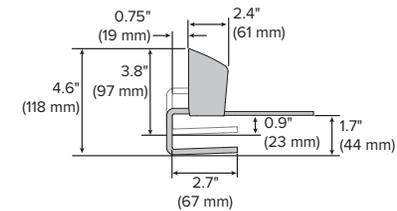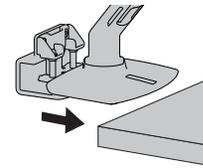

### Ösenhalterung

Nur als Zubehör erhältlich

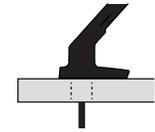

- Zu verwenden, wenn die Befestigung an der Schreibtischkante nicht möglich oder nicht gewünscht ist.
- Geeignet, wenn der Sockel die Tischkante nicht erreicht, wenn der Monitor am gewünschten Platz steht.
- Nur als Zubehör erhältlich

